



 
**mowbie™**



**Detail Trimmer**


# Product Overview

---

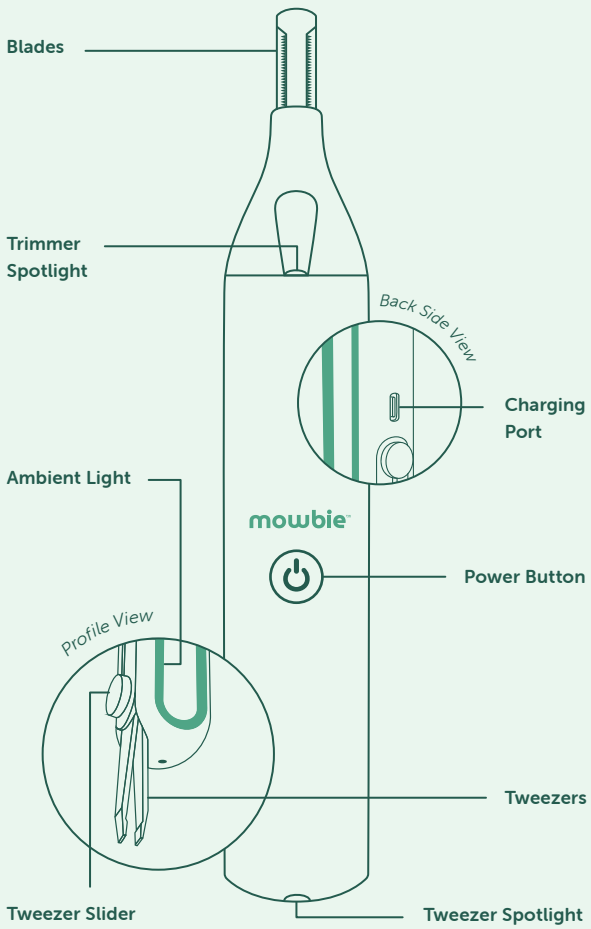


## Accessories

 ---



Trimming  
Guide

 

USB-C  
Charging Cable



Cleaning  
Brush


## Warnings

 ---

- Do not expose to water when charging.
- This device is not a toy and is not intended for use by or on children.
- This device is intended for household use only.
- Do not use the device if it appears damaged, as injury may occur.
- Do not use on injured or damaged skin.
- Keep longer hair and clothing away from product during use.
- Do not share with others, this device is for personal use only.
- Stop use immediately if skin becomes irritated or inflamed.

## How to Charge


---

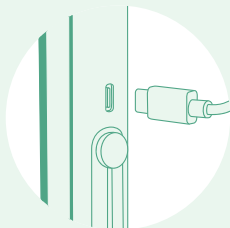

The power button on the device will turn red and the ambient LEDs will dim to indicate that the battery is low. To charge the detail trimmer, plug the USB-C charging cord into the back of the device. Use with a 5-volt USB wall adapter (standard mobile phone charger).

## How to Charge (cont.)

 ---

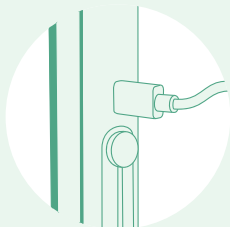

When charging, the power button and ambient LEDs on the side of the device will pulse. Once the device is fully charged, the ambient LEDs will turn off.

*A full charge will take 100 mins. and provide approximately 50 mins. of operation.*

## How to Use

---

1. Press the power button to turn the trimmer and trimmer spotlight ON. Gently press the trimmer against the skin and move in the direction needed to clean up any fine unwanted hair.
2. Press the power button again to switch to 'tweezing mode' - the trimmer and trimmer spotlight will turn off, while the tweezer spotlight will turn on. The tweezer spotlight will automatically turn off after 10 minutes.
3. To extend the tweezers, gently press the slider located on the back of the device and slide it down. The tweezers will extend from the bottom of the device. Use to pluck away any single unwanted hair.
4. To turn the device OFF, press the power button one more time.

## Trimming Guide

---

Slide the trimming guide over the trimmer head. It will 'click' into place once attached.

## Cleaning

---

1. Turn trimmer OFF before cleaning.
2. Remove trimming guide.
3. Clean trimmer and trimming guide by rinsing them under water and/or by using the cleaning brush.
4. Gently shake off excess water.
5. Set aside in a dry area and leave to air dry.

## Warranty

---

The mowbie™ detail trimmer carries a warranty against manufacturing defects (excluding cutting blades) for two years from the date of original purchase. mowbie will, at our option and upon submission of a valid proof of purchase within the warranty period, repair or replace the trimmer free of charge. For assistance or for issues related to performance, damages, blade replacement, warranty, regular maintenance or customer feedback, please contact mowbie Toll Free at (800) 514-2546 (except in Massachusetts) or in Massachusetts at (781) 449-9500 - press zero for an operator and request assistance or visit [mowbie.com](http://mowbie.com), Monday - Friday from 8:30AM until 5:30PM EST.



**Enjoy Your Trim!**

More questions? Visit [mowbie.com/support](http://mowbie.com/support)

# iykym



“if you know,  
you mow”