

 


mowbie™



Body Grooming System


Product Overview

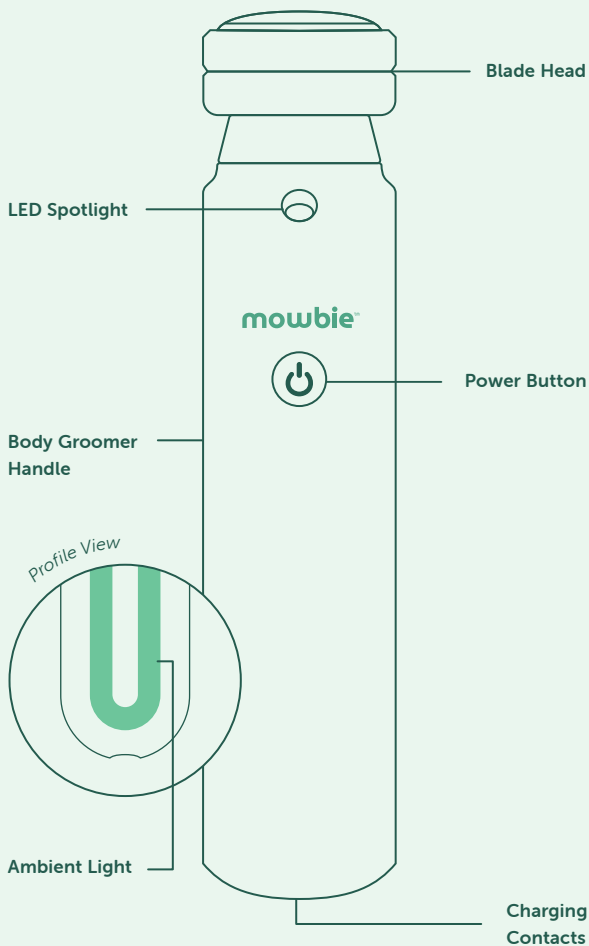

Accessories




**Precision
Foil Shaver**

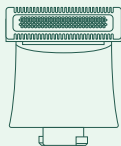


Utility Blade



Foil Shaver Cap

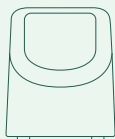


**Charging
Stand**

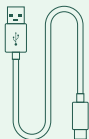

**USB-C
Charging Cable**



**Cleaning
Brush**

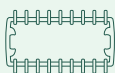

0mm



3mm



5mm



7mm

4 Trimming Guides


Warnings

- Do not expose to water when charging.
- This device is not a toy and is not intended for use by or on children.

Warnings (cont.)

- This device is intended for household use only.
- Do not use the device if it appears damaged, as injury may occur.
- Do not use on injured or damaged skin.
- Keep longer hair and clothing away from product during use.
- Do not share with others, this device is for personal use only.
- Stop use immediately if skin becomes irritated or inflamed.

How to Charge

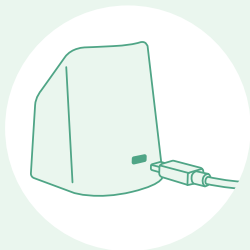

The power button on the device will turn red and the ambient LEDs will dim to indicate that the battery is low. To charge the body groomer, plug the USB-C charging cord into the back of the charging stand. Use with a 5-volt USB wall adapter (standard mobile phone charger).



Then, place the device in the charging stand so the bottom charging contacts on the device line up with the contacts on the charging stand. When charging, the power button and the ambient LED lights on the side of the device will pulse. Once the device is fully charged, the LED lights will turn off.

A full charge will take 130 mins. and provide approximately 80 mins. of operation.


How to Use

Select an attachment depending on the type of hair to be groomed. Use the precision foil shaver to remove short hair or stubble less than 2mm in length. Use the utility blade for trimming longer, thicker hair. Press the power button to turn the groomer and spotlight ON. The built-in LED spotlight helps illuminate the hair. To turn the device OFF, press the power button again.


Only switch blade heads when the device is OFF. To remove a blade head, hold the product firmly, hold the blade head at the neck, twist counterclockwise, and pull off.



To attach a blade head, line the head up so that the arrow marking on the head matches the arrow on the device's neck. Then push the head into the device and twist clockwise to lock into place.

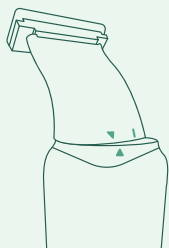

Line up the arrows on the back of the blade head and handle.

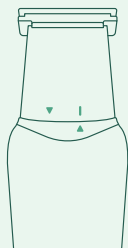

Twist the handle to the left until the line mark on the blade head lines up with the arrow on the handle.

Trimming Guides

Place a trimming guide over the utility blade head. It will 'click' into place once attached. For a close trim in sensitive areas, such as the groin or underarms, we recommend using the 0mm trimming guide for an extra layer of protection.

Cleaning

1. Turn groomer OFF before cleaning.
2. Remove any trimming guides from the utility blade.
3. Remove the foil cover from the foil shaver head (see the diagram below).
4. Clean the utility blade, foil shaver blades, foil cover, and trimming guides by rinsing under water and/or by brushing with the cleaning brush.
5. Gently shake off excess water.
6. Set aside in a dry area and leave to air dry.

Foil Cover Removal:



To remove the foil cover from the shaver head, hold the bottom of the shaver head firmly, twist the foil cover counterclockwise, and pull off.

Warranty

The mowbie™ body grooming system carries a warranty against manufacturing defects (excluding cutting blades) for two years from the date of original purchase. mowbie will, at our option and upon submission of a valid proof of purchase within the warranty period, repair or replace the groomer free of charge. For assistance or for issues related to performance, damages, blade replacement, warranty, regular maintenance or customer feedback, please contact mowbie Toll Free at (800) 514-2546 (except in Massachusetts) or in Massachusetts at (781) 449-9500 - press zero for an operator and request assistance or visit mowbie.com, Monday - Friday from 8:30AM until 5:30PM EST.



Enjoy Your Groom!

More questions? Visit mowbie.com/support

iykym



“if you know,
you mow”